



# AKÜ KİT

## Index / İçindekiler


1	TR	<b>AKÜ KİT</b> Kurulum ve kullanım klavuzu	1
2	EN	<b>BATTERY KİT</b> Installation and use instructions	2

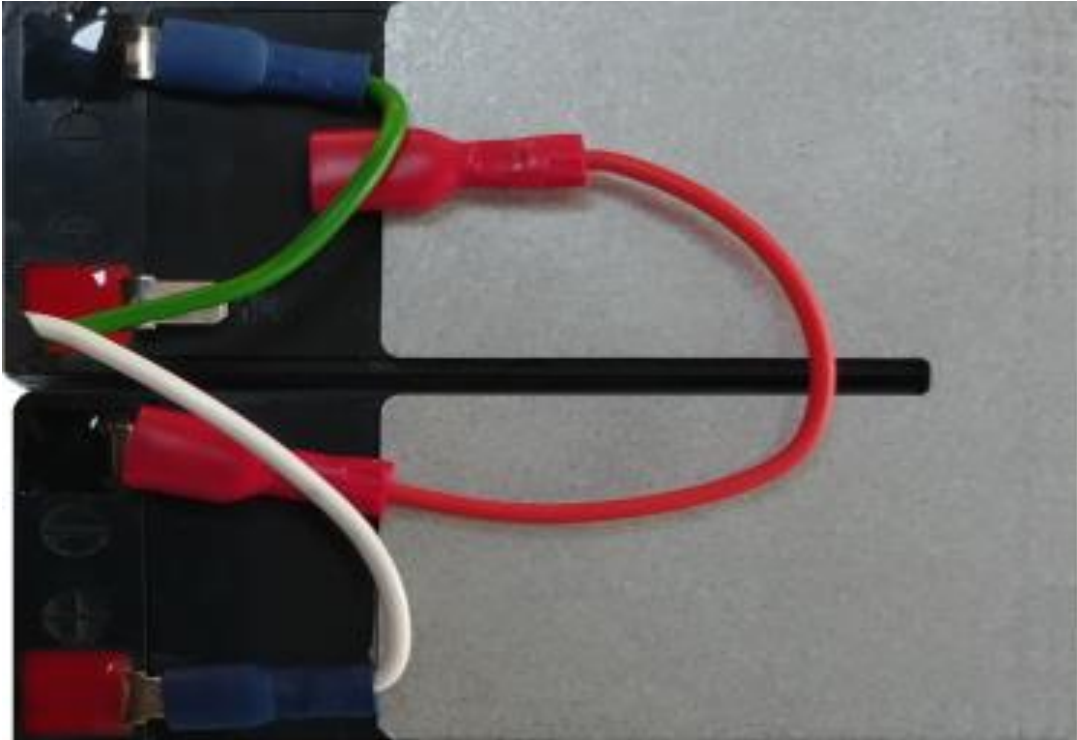

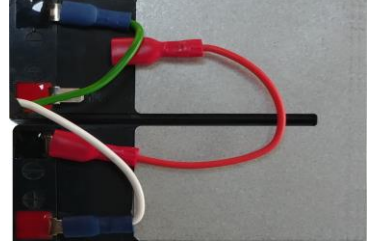


## Akü Kit Mekanik Montaj

No.	Açıklama	Adet	Boşluk
1	Enerji soketi (on-off buton)	2	B
2	Motor	1-1-1	B-C-D
3	Kontrol ünitesi-E.fotoseli	2	C
4	Toroid trafo	2	C
5	Akü (opsiyonel)	2	C
6	Çalışma stoperlerinin ucu	8/4	A
7	Dönüş makarası	2	D
8	Elektrikli kilit (opsiyonel)	2	D

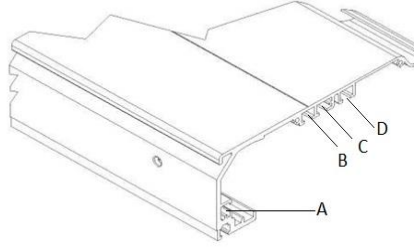

## Kontrol Kartı Bağlantısı

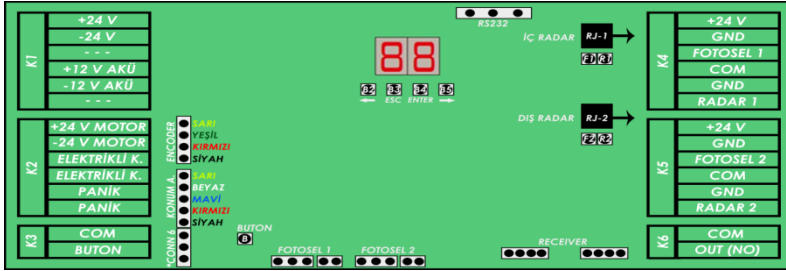


\*Kontrol kartı üzerinde K1 Klemens portunun 5-6 numaralı klemenslerinden Akü Kit bağlantısını yapabilirsiniz.

## r-tec Otomatik Kapı Parametre Ayarları


		Min.	Max.	Fab.
b1	Akü	00 : Aç ve bekle	00	01
		01 : Çalışmaya devam et		

# BATTERY KIT

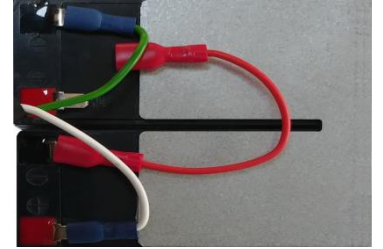


## Battery Kit Mechanical Connection

No.	Explanation	Piece	Space
1	Power socket (on-off buton)	2	B
2	Motor	1-1-1	B-C-D
3	Control Unit- Photocell	2	C
4	Toroid trafo	2	C
5	Battery (optionally)	2	C
6	End of working stoppers	8/4	A
7	Turn roller	2	D
8	Electromechanical Lock (optionally)	2	D

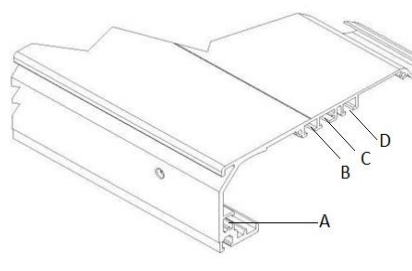

## Control Unit Connection

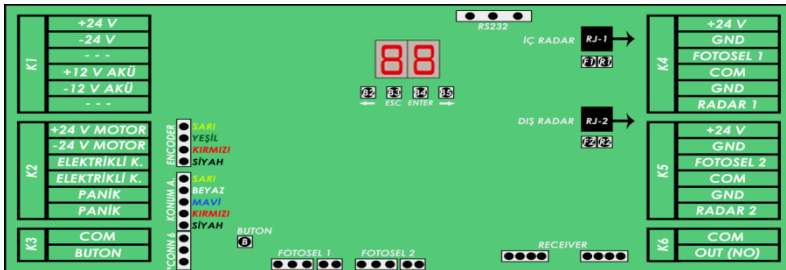

\* You can connect the battery kit from the terminals 5-6 of K1 terminal port on the control board.

## r-tec Control Unit Parameters

		Min.	Max.	Fac.
b1	Battery	00 : Open and Wait	00	01
		01 : Continue to operate		