

KEYPAD SELECTOR



Use;

Type the password and press Enter. If the password is entered correctly, the green LED will flash once and open the door.

If you enter the password incorrectly and press the **Enter** key, the red LED flashes once and does not open.

Factory setting password: **1234**

Password range to create: **from 4 to 8 digits**

Change Password ;

1- Press and hold the **Enter** key for 10 seconds. Leave the red and green LEDs fire on at the same time.

2- Enter the old password and press Enter once. If the old password entered is correct, the red and green LEDs fire will go on and off once.

3- Enter the new password you specify and press and release the Enter key once. The red and green LEDs fire will go on and off once.

4- Enter the new password you specified again and press and release the Enter key once. Red and green leds will flash 5 times at the same time and save the password.

If you enter the new password during the installation; If the red and green LEDs are off, you may have entered the password incorrectly in step 4 of the installation. Please repeat the procedure for changing the password.

Cable Connection;

input	Cable Color
+ 24 V	RED
- 24 V	BLACK
COM	WHITE
NO	YELLOW