



PULL 1000 GARAGE DOOR MOTOR 3 S



35

Problem	Causes	Solution
The chain is noisy	The chain is too loose	Adjust Nut-M8 referring
The motor does not work	The socket is not well connect or the fuse is broken	Check the socket or replace the fuse
After setting open and close positions, the motor does not work	The screws of fixing the hall components are loose or program mistakes	Tighten the screws or resetting open and close positions
The door can't be closed.	Photocell function work	Cancel the photocell function, referring to 6.6
The Wall button Works well, but the transmitter doesn't work	No transmitter learning or transmitter battery is power off	Code referring to 6.4 or change new transmitter battery.
Transmitter distance is too short	The transmitter battery is nearly power off	Change new battery